



QShooter

Installation Guide
Installationsanleitung
Manuel d'installation



Model

 





QS-100

QShooter


- ① QShooter x1
- ② Pellet Container x1
- ③ Pellet Tube x1
- ④ Holder x1
- ⑤ LED Window x1
- ⑥ Mini USB Port x1

(Connected with QEye by
Connection cable)




Item	Pictures	Description
QShooter		Auto Feeder to Shoot Pellets (Max. Pellet Size : 2.0 mm)
Holder		Attach QShooter to The Tank (Max. Tank Thickness: 1 inch/25.4mm)
Remote Control		IR Remote Control Feeding
Power Adapter		Universal Power Supply
Power Adapter Cable 200 cm		Connect QShooter with Power Adapter
Connection Cable 50cm		Connect QEye with QShooter


1. Attach the holder to QShooter by sliding

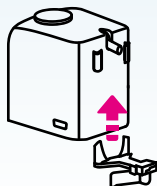


2. Hang QShooter on the tank

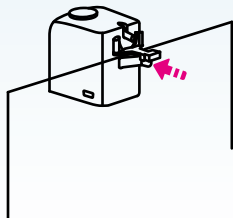

3. Open the lid and pour the pellets

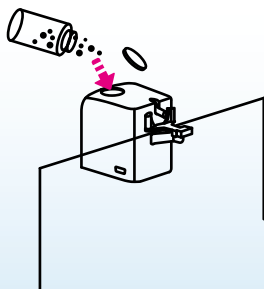


4. Please align the dot between QShooter and the lid when closing

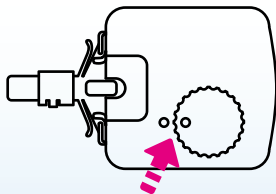

QShooter MUST have the lid firmly sealed to prevent air pressure from escaping (this may cause no shooting).

5. Connect power adapter and enjoy feeding by remote control

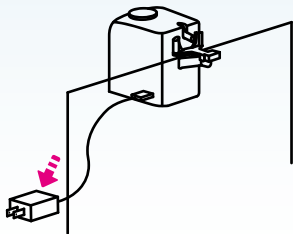

QShooter LED Indicator


- LED On : Power On
- LED Flashing Slowly :
Food Empty
- LED Flashing Quickly :
Over Shooting (Feeding)



QShooter

1. Power Input : 100-240 VAC 50 / 60 HZ
2. Power Output (USB) : 5 V 2000 mA
3. Power Consumption : 5 W (Max.)
4. QShooter Size : 78 mm x 94 mm x 84 mm
(Width x Height x Depth)
5. Max Tank Thickness : 1.0 inch (25.4 mm)
6. Max. Pellet Size : 2.0 mm


* Notice : Please make sure power is " on " before using

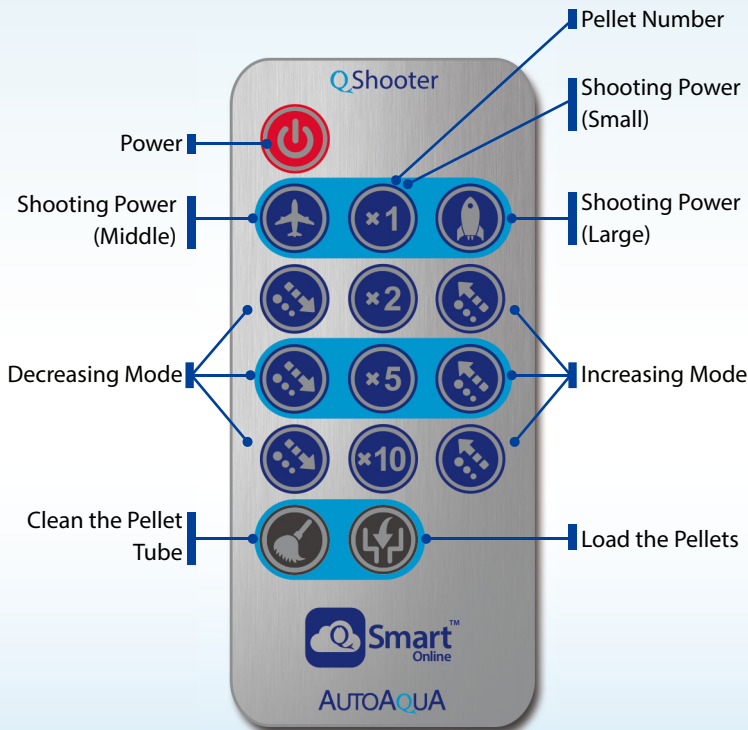

1. Keep QShooter dry and avoid any contact with water to prevent any malfunction.
2. Please add pellets in mounted QShooter directly without moving QShooter and keep QShooter horizontal.



3. Do NOT move QShooter with pellets in it. Please tip pellets out by tipping them from the opposite side of QShooter nozzle as the picture below indicates. Do NOT turn QShooter upside down with pellets in it. Failure to observe these points could cause pellets to move into solenoid valve and block it.

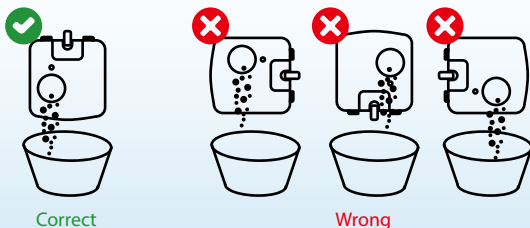

- ① This product is guaranteed for one year from the date of purchase at normal operation.
- ② This warranty is not transferable.
- ③ Any incorrect operation will not be warranted and will result in a repair fee.
- ④ All warranty repairs are performed by the distributor. Please contact the distributor to obtain a Return Authorization number when sending a warranted unit.
- ⑤ This guarantee is effective on the date listed on your sales receipt.

Purchase Date

(Y/M/D)

Place of Purchase

(Store name, phone, email, address)

Mehr Informationen
zur Benutzung

**AUTOAQUA Technologies Co., Ltd.**

7F-7.,NO.229,Fuxing 2nd Rd.,Zhubei City, Hsinchu County,Taiwan

E-mail : service@autoaqua.com.twwww.autoaqua.com.twqsmartonline.com